

AQUASPEC FAUCETS

MODEL - Z82600 SERIES
SINGLE HOLE, DOUBLE LABORATORY FAUCET



TECHNICAL INFORMATION

FLOW: 2.2 GPM [8.3L] PRESSURE COMPENSATING AERATOR *

MAXIMUM PRESSURE: 125 PSI

MAXIMUM TEMPERATURE: 180°F

HANDLE NUT TORQUE: 15-20 FT - LBS.

CARTRIDGE STYLE: QUARTER TURN CERAMIC DISK

* OTHER AERATORS AVAILABLE BY REQUEST


INSTALLATION INSTRUCTIONS

1. REMOVE FAUCET BODY FROM CARTON AND INSTALL FRICTION GASKET (ITEM #5A) ON SHANK.
2. OPTIONAL ANTI-ROTATION PIN (-AR), THREAD ANTI-ROTATION PIN INTO THE THREADED HOLE ON THE UNDER SIDE OF THE DOUBLE LAB BODY. SEE PAGE 2 FOR ROUGH-IN DIMENSIONS TO ACCOMODATE THE (-AR) OPTION.
3. PLACE FAUCET ON SINK AND SECURE WITH WASHER (ITEM #5B) AND MOUNTING NUT (ITEM #5C).
4. TIGHTEN MOUNTING NUT FROM UNDER SINK. MAKE SURE FAUCET IS CENTERED PROPERLY. **DO NOT OVER TIGHTEN.**
5. INSTALL SPOUT INTO BASE AND TIGHTEN NUT (SEE VIEWS FOR SWING/RIGID CONNECTION).
6. ATTACH FLEX HOSE LAVATORY SUPPLIES (ITEM #6) TO FAUCET.
7. OPTIONAL GRID STRAINER (-G) / HANDICAP OFFSET GRID DRAIN (-GH)
INSTALL GRID STRAINER IN SINK OUTLET AND PLUMB WASTE CONNECTION.
8. TURN WATER SUPPLY ON AND OPERATE FAUCET CHECKING FOR LEAKS.
9. IT MAY BE NECESSARY TO SHUT WATER OFF AND REMOVE CARTRIDGES TO CLEAN SUPPLY LINES. CARTRIDGES CAN BE REMOVED BY FIRST REMOVING THE HANDLES. COLOR INDEXES CAN BE REMOVED BY INSERTING A PIN INTO THE HOLE ON THE UNDERSIDE OF THE HANDLE. AFTER THE HANDLES HAVE BEEN REMOVED UNSCREW THE HANDLE NUTS AND PULL OUT ON THE CARTRIDGE. ZURN WILL SUPPLY HANDLE PORT PLUGS (ZURN PART #61094001) AT YOUR REQUEST.
10. REPLACE CARTRIDGES IN BODY AND HAND TIGHTEN HANDLE NUTS. PLACE HANDLES ON THE CARTRIDGE STEM AND LOCATE THEM AS DESIRED. TIGHTEN HANDLE NUT.
11. REPLACE HANDLE SCREWS AND COLOR INDEX BUTTONS.
12. INSTALL AERATOR INTO FAUCET AND HAND TIGHTEN. IT MAY BE NECESSARY TO UNSCREW AND CLEAN AERATOR AT START-UP.

MAINTENANCE

1. YOUR ZURN AQUASPEC FAUCET HAS A HIGHLY POLISHED NICKEL CHROME PLATED FINISH. CLEAN WITH SOAP AND WATER OR A MILD CLEANER WHICH IS SAFE FOR CHROME PLATING. DO NOT USE ACIDS OR TOILET BOWL CLEANER AS THEY WILL DAMAGE THE FINISH.
2. AQUASPEC FAUCETS CONTAIN CERAMIC DISK CARTRIDGES WHICH REQUIRE NO MAINTENANCE. TO REMOVE THE CARTRIDGE SHUT THE WATER OFF, LOOSEN THE HANDLE NUTS AND PULL OUT ON THE CARTRIDGE.

Z826A1 PICTURED

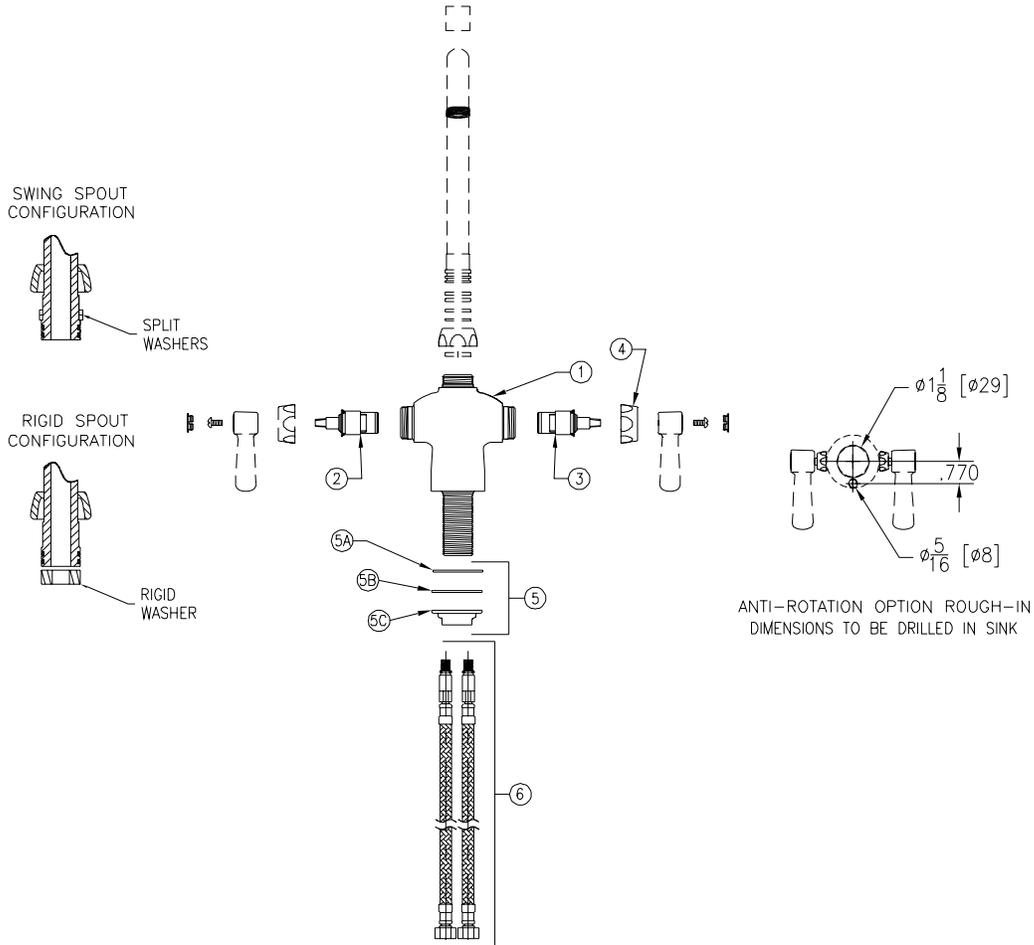

Z82600 PARTS LIST

ITEM		QTY	ITEM	QTY
1	60822002	1	5A	1
2	59517001	1	5B	1
3	59517002	1	5C	1
4	59523001	2	6	1
5	G61073	1		
	DOUBLE LAB BODY		60549002	1
	SHORT COLD CARTRIDGE		60444002	1
	SHORT HOT CARTRIDGE		60445002	1
	HANDLE NUT		G66621	1
	MOUNTING HARDWARE			
			FRICITION GASKET	
			WASHER	
			MOUNTING NUT	
			S.S. BRAIDED FLEX HOSES	

REPLACEMENT PARTS

COLD WATER CARTRIDGE 59517001
 HOT WATER CARTRIDGE 59517002
 INDEX BUTTONS G60500



ZURN INDUSTRIES, INC. ♦ COMMERCIAL BRASS OPERATION ♦ 2640 SOUTH WORK STREET ♦ FALCONER NY 14733

Phone: 1-716-665-1132 ♦ Fax: 1-716-665-1135 ♦ World Wide Web: www.zurn.com

In Canada: ZURN INDUSTRIES LIMITED ♦ 3544 Nashua Drive ♦ Mississauga, Ontario L4V1L2 ♦ Phone: 905/405-8272 Fax: 905/405-1292