



# Aquaflush® Z6100 Series

Aquaflush Concealed Flushometer  
Installation, Operation,  
Maintenance, and Parts Manual

Patented and Patents Pending



**Z6140**

## Aquaflush Concealed Closet/Urinal Systems

**Z6140**  
**Z6142**  
**Z6143**  
**Z6144**  
**Z6150**  
**Z6152**  
**Z6154**  
**Z6155**  
**Z6190**  
**Z6195**  
**Z6196**



**Z6195**

### LIMITED WARRANTY

All goods sold hereunder are warranted to be free from defects in material and factory workmanship for a period of three years from the date of purchase. Decorative finishes warranted for one year. We will replace at no cost goods that prove defective provided we are notified in writing of such defect and the goods are returned to us prepaid at Sanford, NC, with evidence that they have been properly maintained and used in accordance with instructions. We shall not be responsible for any labor charges or any loss, injury or damages whatsoever, including incidental or consequential damages. The sole and exclusive remedy shall be limited to the replacement of the defective goods. Before installation and use, the purchaser shall determine the suitability of the product for his intended use and the purchaser assumes all risk and liability whatever in connection therewith. Where permitted by law, the implied warranty of merchantability is expressly excluded. If the products sold hereunder are "consumer products," the implied warranty of merchantability is limited to a period of three years and shall be limited solely to the replacement of the defective goods. All weights stated in our catalogs and lists are approximate and are not guaranteed.



# Aquaflush Rough-In, Product Specification, Models and Options

**ENGINEERING SPECIFICATION: ZURN Aquaflush Concealed Closet Flush Valve** – Concealed, quiet diaphragm-type, rough brass flushometer valve with chloramine resistant, dual seal diaphragm with a clog resistant by-pass. Complete with a non-hold-open and no leak handle feature, high back pressure vacuum breaker, flush tube, elbow flush connections, wall escutcheon, fixture spud escutcheon, and fixture spud securing nut. Control stop has internal siphon-guard protection. Internal seals are made of chloramine resistant materials.

## MODELS


- Z6140 – 1-1/2" Water Closet valve with top spud connection
- Z6152 – 1-1/2" Water Closet valve with back spud connection
- Z6190 – 1-1/4" Urinal Valve with top spud connection
- Z6195 – 3/4" Urinal Valve with top spud connection

## FLOWS

- WS1 Low Consumption  
1.0 Gal. for Urinal, 1.6 Gal. for Water Closet
- WS Water Saver  
1.5 Gal. for Urinal, 3.5 Gal. for Water Closet (Standard Flow)
- FF Full Flow  
3.0 Gal. for Urinal, 4.5 Gal. for Water Closet


## OPTIONS

- \_\_\_ -BG BioCare ADA Handle
- \_\_\_ -J Metal Oscillating ADA Handle
- \_\_\_ -L 1" [25] Metal Push Button
- \_\_\_ -L3 3" [76] Metal Push Button
- \_\_\_ -YB Sweat Solder Kit
- \_\_\_ Other

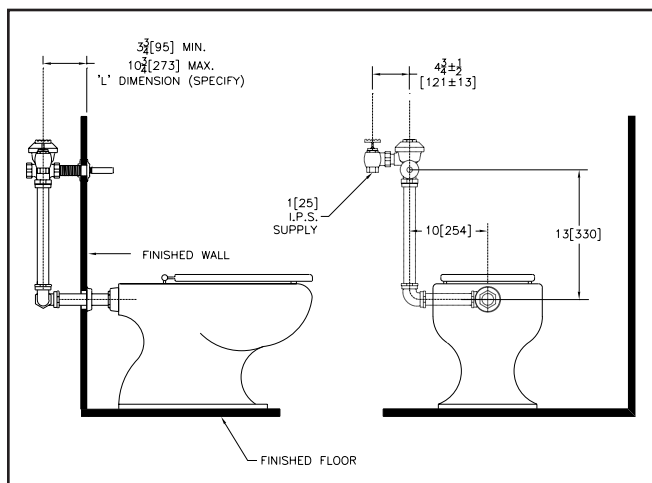


Models: Z6140

-WS1 (water saver) 1.6 Gal. Low Consumption

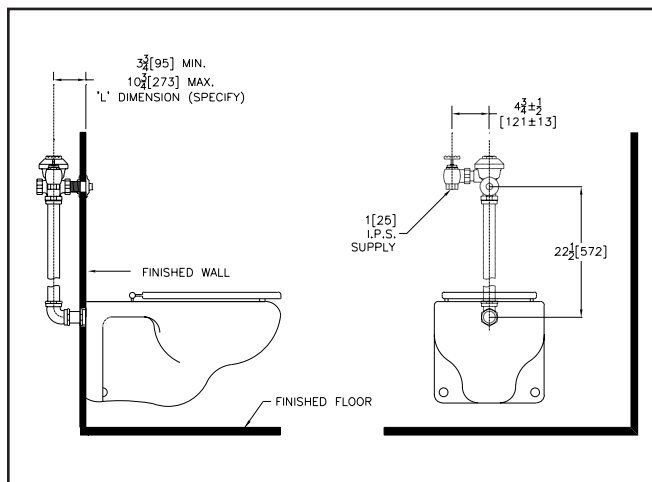

Models: Z6152

-WS1 (water saver) 1.6 Gal. Low Consumption

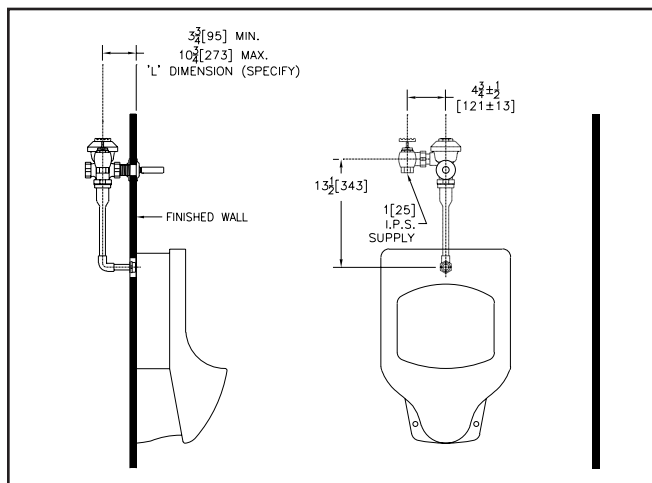

Models: Z6195 (3/4" urinal flush valve) shown,  
Z6190 (1-1/4" urinal flush valve)

-WS1 (water saver) 1.0 Gal. Low Consumption

# Aquaflush Installation Instructions

## Important:

- All plumbing is to be installed according to state and local codes and regulations.
- Water supply lines need to allow proper water flow for each fixture.
- Flush all lines of any **debris** before making connections.
- Do not use pipe sealant or plumbing grease on any fitting other than the control stop inlet.


The Aquaflush valve is designed to operate under various water pressures with a recommended range between 10 and 100 psi (69 to 689 kPa). Each Zurn valve is tested for proper performance at the factory before being shipped. Consult the product pages of the catalog for available flow options.

Most low consumption valves (1.6 gallon) require a minimum of 25 psi running pressure through the valve to obtain proper evacuation.


When installing your quality Zurn valve, it is recommended that a smooth jawed wrench be used. This will prevent gouges and scratches on your valve.

**Before starting the installation process, bore a 1-1/2" hole in wall for actuator, and a 2" hole for piping if required.**


1. Install the Zurn Control Stop to the supply line with the water outlet positioned as needed. If using a sweat solder adaptor, sweat the adaptor to copper tubing before installing control stop.

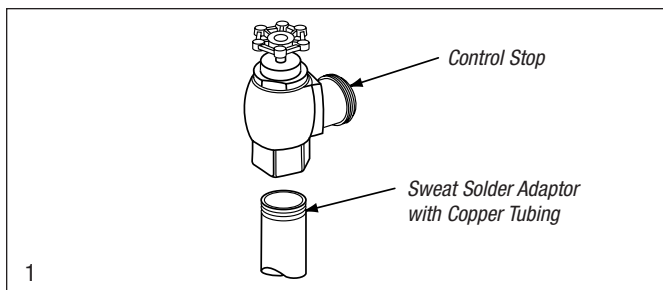


2. Attach vacuum breaker tube and elbows to fixture with spud nut. *Note: When cutting scored pipe to fit, leave a minimum of 1-1/4" of scoring to ensure proper engagement with compression coupling.*

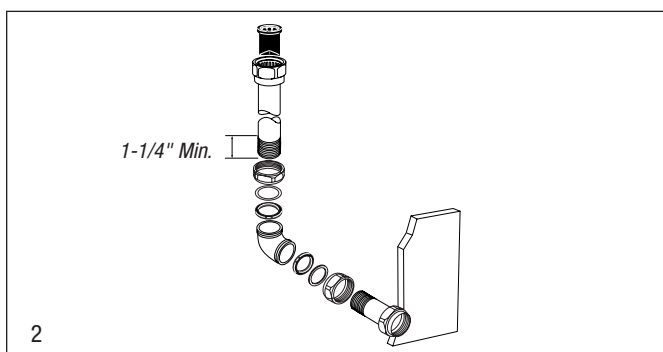


3. Remove the actuator end, coupling and mounting nut from the actuator sleeve and insert the sleeve through the 1-1/2" hole from the fixture side. Reinstall the mounting nut (hand tight), coupling and actuator end to the sleeve.

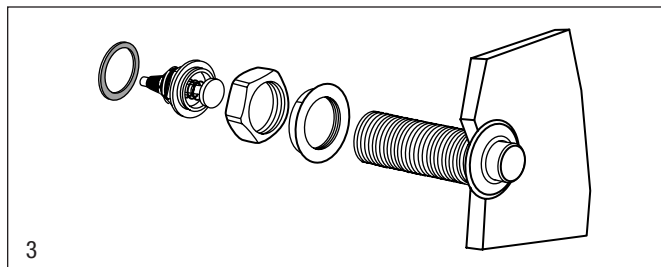

4. Insert the adjustable tail piece into the control stop while installing the valve. *Note: The adjustable tail piece allows for +/- 1/2" from the standard 4-3/4" centerline to centerline rough in.* Lubricate O-ring on adjustable tail piece with water if needed for installation. Secure the valve by hand tightening the actuation coupling nut and tail piece coupling nut. Position valve over flush tube and secure with the flush tube coupling nut. After aligning the valve securely tighten the actuator assembly, control stop and the flush tube with a wrench. *A smooth jaw wrench is recommended to protect special finishes.*

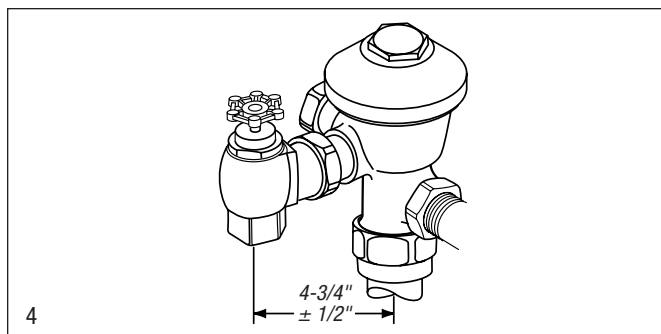


5. Shut off the control stop, remove the valve cover and remove the internal diaphragm kit. Reinstall the valve cover and open control stop to flush lines of debris. After the lines are clear, remove the cover and reinstall the diaphragm kit. Tighten the cover back on and adjust flush flow using the control stop. The stop cap screw cover should be replaced after final adjustments have been made.

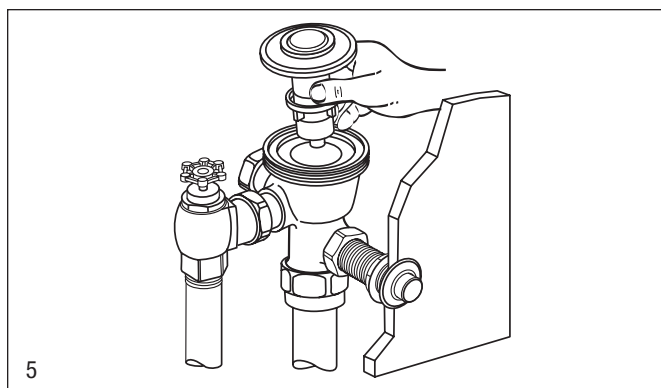



# Specifying “L” Dimension for Concealed Manual-Operated Flush Valves


- Step 1: **Determine the applicable column** by locating the valve’s 4-digit model number.
- Step 2: **Determine the applicable row** by locating the correct wall thickness.  
NOTE: For wall thicknesses not listed, locate and use the next largest size.
- Step 3: **Order the applicable suffix** shown at the intersection of the row and column.
- Example: For closet valve model number Z6152 and a wall thickness of 6", order: Z6152-LDIM9.

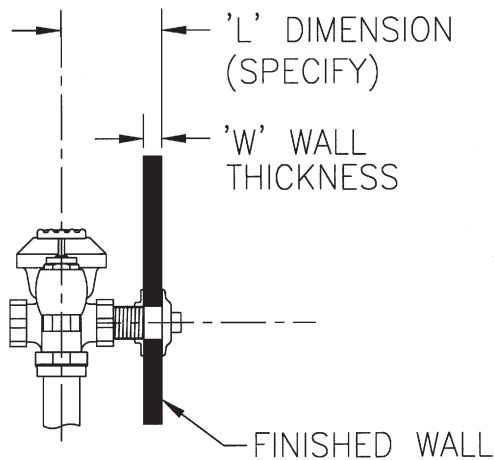


	Closets			Urinals		Combination Fixtures
Wall Thickness "W"	6140	6152			6602	
	6142	6154			6602	
	6143	6155			6609	6601
	6144	6605		6190	6613	6603
	6150	6611	6681	6195	6615	6616
1/4"	LDIM4		LDIM7	LDIM4		LDIM5
1"	LDIM4		LDIM7	LDIM4		LDIM5
2"	LDIM5		LDIM8	LDIM5		LDIM6
3"	LDIM6		LDIM9	LDIM6		LDIM7
4"	LDIM7		LDIM10	LDIM7		LDIM8
5"	LDIM8		LDIM11	LDIM8		LDIM9
6"	LDIM9		LDIM12	LDIM9		LDIM10
7"	LDIM10		LDIM13	LDIM10		LDIM11
8"	LDIM11		LDIM14	LDIM11		LDIM12
9"	LDIM12		LDIM15	LDIM12		LDIM13
10"	LDIM13		LDIM16	LDIM13		LDIM14

## Z6199 Model Access Panel and Frame for Manual-Operated Concealed Flush Valves



Z6199-BX12

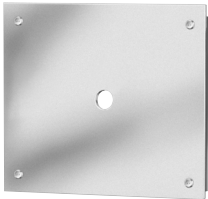

Z6199-BX15

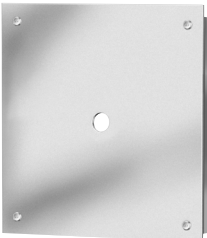

Z6199-BX17

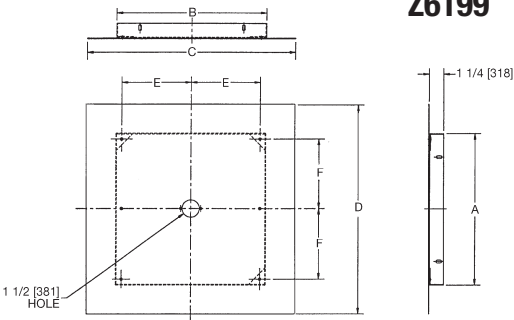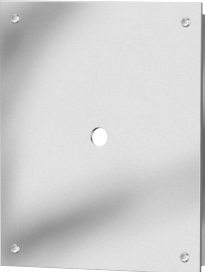

Z6199

### Engineering Specification: Zurn Z6199 Access Panel and Frame for Manual-Operated Concealed Flush Valves –

The access panel and frame provide quick and simple access to in-wall concealed flush valves when a mechanical chase of adequate size is not available. The panel is #14 gage stainless steel and the frame is #18 gage stainless steel. Both have a satin finish. The assembly comes complete with (4) 1" [25 mm] vandal-proof screws. Specify Z6199-BX12 for 12" x 12", Z6199-BX15 for 15" x 15", or Z6199-BX17 for 13" x 17".

Product No.	Size	A	B	C	D	E	F
Z6199-BX12	12 x 12 [305x305]	12 [305]	12 [305]	13-1/2 [343]	13-1/2 [343]	5-1/2 [140]	5-1/2 [140]
Z6199-BX15	15 x 15 [381x381]	15 [381]	15 [381]	16-1/2 [419]	16-1/2 [419]	7 [178]	7 [178]
Z6199-BX17	13 x 17 [330x432]	17 [432]	13 [330]	14-1/2 [368]	18-1/2 [470]	6 [152]	8 [203]

#### SUFFIX OPTIONS


(Check/specify appropriate options.)

-SP	Solid Panel
-2VPS	2" [51mm] Long Vandal-Proof Screws

# Aquaflush Repair Kits

## Parts Identification

1. Optional 1" Metal Push Button
2. Optional 3" Metal Push Button
3. Handle
4. Actuator Rod
5. Handle O-Ring
6. Handle Spring
7. Handle Seal Retainer
8. Handle Seal
9. Gasket
10. Valve Body Cover
11. Plastic Cover
12. Trip Mechanism
13. Retainer Disk
14. Diaphragm
15. Flow Ring
16. Guide Ring
17. Cylinder Slide
18. Valve Body
19. Vacuum Breaker Friction Washer
20. Vacuum Breaker Insert
21. Vacuum Breaker Duckbill
22. Vacuum Breaker Tube
23. Vacuum Breaker Tube Nut
24. Coupling Nut
25. Spud Friction Washer
26. Spud Rubber Gasket
27. 90° Elbow
28. Tailpiece
29. Snap Ring
30. Tailpiece O-Ring
31. Locking Nut
32. Stop Body
33. Piston Seal
34. Piston
35. Stop Spring
36. Guide O-Ring
37. Piston Guide
38. Guide Holder
39. Adjusting Screw
40. Stop Cap
41. Wheel Handle
42. Wheel Handle Screw
43. Solid Gasket
44. Solid Handle Nut
45. Flanged/Scored Horizontal Tube
46. P30 Flat Gasket
47. Wall Escutcheon
48. Sleeve/Socket
49. Adjusting Nut
50. Optional Bell Nut
51. Handle Nut
52. Push Rod/Filler Rod
53. Spud Nut
54. 3/4" 90° Elbow
55. 3/4" Horizontal Tube
56. 3/4" Spud Nut
57. Spud Friction Washer
58. Spud Rubber Gasket

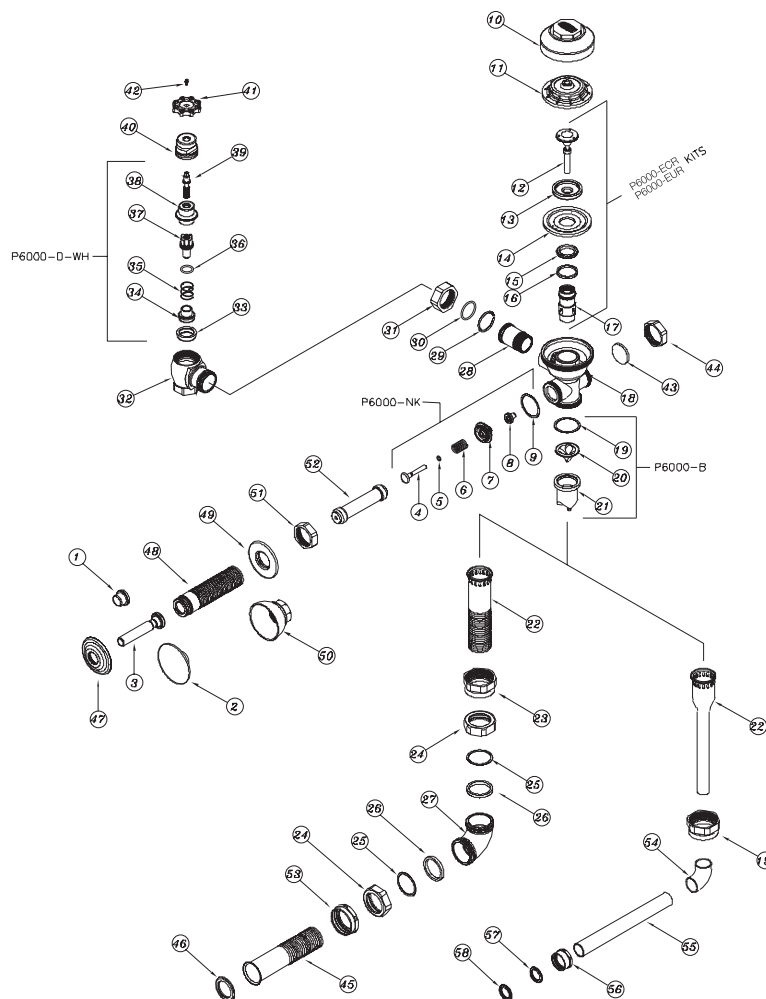

Covers and Repair Kits	Product No.
Outside Cover - RB - Item 10	P6000-LL-RB
Inside Cover - Item 11	P6000-L
Low Consumption Closet Kit - 1.6 gal. flush	P6000-ECR-WS1
Water Saving Closet Kit - 3.5 gal. flush	P6000-ECR-WS
Full Flow Closet Kit - 4.5 gal. flush	P6000-ECR-FF
Low Consumption Urinal Kit - 1.0 gal. flush	P6000-EUR-WS1
Water Saving Urinal Kit - 1.5 gal. flush	P6000-EUR-WS
Full Flush Urinal Kit - 3.0 gal. flush	P6000-EUR-FF

Repair Parts - Inside Parts	Product No.
Urinal Relief Valve - Item 12	P6000-EU13
Closet Relief Valve - Item 12	P6000-EC13

Aquaflush Rebuild Kits	Product No.
Closet and Urinal Rebuild Kits, Includes Items 4-9, 12-17, 19-21, 30	P6000-ECR-WS-RK P6000-ECR-WS1-RK P6000-EUR-WS-RK P6000-EUR-WS1-RK

Handle Assembly and Repair Kits	Product No.
Concealed Valve Actuator (Spec. Type and 'L' Dim.)	P6000-N- P6000-NL- P6000-NL3-
Handle Repair Kit (Side), Includes Items 4-9	P6000-NK
Handle Seal, Includes Item 8	P6000-M9
Handle Gasket, Includes Item 9	P6000-M10

Control Stop Repair Kit and Parts	Product No.
Control Stop Repair Kit for 1" and 3/4", Includes Items 33-39	P6000-D-SD
Seal Seat for 1" and 3/4", Includes Item 33	P6000-D42
Sweat Solder Connection	P6000-YBA

Adjustable Tailpieces	Product No.
Adjustable Tailpiece for Standard Flush Valve, Includes Items 28-31	P6000-J1-RB
Tailpiece Locking Ring, Includes Item 29	P6000-C30
Tailpiece O-Ring, Includes Item 30	P6000-C31
Coupling Nut, Includes Item 31	P6000-C32-RB

Flush Connections and Spud Coupling Kits	Product No.
Flush Tube Assembly for Concealed Flush Valves Refer to Section Q in Aquaparts Guide. Specify 'L' Dim. and valve used.	P6000-Q _ _ -
Vacuum Breaker Repair Kit, Includes Items 19-21	P6000-B
Spud Coupling Assembly, Includes Items 56-58 Specify size.	P6000-HN





# Aquaflush Trouble Shooting Guide

Problem	Cause*	Corrective Action*
Valve will not operate.	1.) Stop valve is closed. 2.) Supply valve is closed.	1.) Open stop valve. 2.) Open supply valve.
Insufficient volume of water to adequately siphon fixture.	1.) Stop valve is not open enough. 2.) Urinal trip mechanism installed in wrong kit, urinal or closet. 3.) Insufficient volume or pressure at supply.	1.) Open stop valve for desired volume of water. 2.) Replace urinal part with proper closet valve part. 3.) If gauges are not available to measure supply pressure or volume of water at the valve, completely remove the working parts and open the stop valve to allow water to pass through the empty valve. If the supply is adequate to siphon the fixture, the guide ring (#16) may be removed from the guide assembly to provide additional flow. Should this prove unsatisfactory, steps should be taken to increase the pressure and/or supply.
Flush valve shuts off too quickly.	1.) Damaged or punctured diaphragm. 2.) Enlarged by-pass orifice.	1.) Install new P6000-EUR replacement kit to remedy the problem. (#12 thru #17) 2.) Install new P6000-ECR, P6000-EUR replacement kit to remedy the problem. (#12 thru #17)
Valve is short flushing.	1.) Cylinder guide assembly and diaphragm assembly are not tight. 2.) Enlarged by-pass orifice. 3.) Urinal trip mechanism (black #12) in closet flush valves.	1.) Screw the two assemblies hand tight. 2.) Install new P6000-ECR, P6000-EUR replacement kit to remedy the problem. (#12 thru #17) 3.) Install closet trip mechanism (white #12).
Valve is flushing too long or not shutting off.	1.) Trip mechanism not seating properly due to foreign material between trip mechanism and retainer disc. 2.) By-pass orifice is plugged or partially plugged. 3.) Line pressure is not adequate to force trip mechanism to seal. 4.) Cracked cover.	1.) Disassemble parts and rinse thoroughly. 2.) Examine by-pass orifice and clean if necessary being certain not to enlarge orifice opening. 3.) Pressure is inadequate or has dropped below minimum operating range. Steps should be taken to increase the line pressure. 3.) Replace cover with new one (#11).
Water splashes out of fixture.	1.) Supply volume is more than is necessary. 2.) Lime accumulation on vortex or spreader holes of fixture.	1.) Adjust downward on control stop. 2.) Remove the lime build up.
Flush is not considered quiet.	1.) Control stop may not be adjusted for quiet operation. 2.) Fixture may be contributing to noise. 3.) Piping system may be source of noise.	1.) Adjust the control stop for quiet operation keeping in mind the fixture evacuation requirements. 2.) Check noise created by fixture by placing a cover over the bowl opening to separate valve noise from bowl noise. If it is determined the fixture is too noisy consult with fixture manufacturer. 3.) High pressure in the system can sometimes be controlled by the stop valve. Other sources of noise may be the absence of air chambers and shock arrestors, loose pipes, improper size pipes, etc. In these cases the building engineer should be consulted.
Chattering noise in flush valve.	1.) Segment diaphragm (#14) has been installed upside down. 2.) The inside cover has been distorted by freezing or abuse.	1.) Reposition segment diaphragm as instructed by the markings on the diaphragm ("this side down"). 2.) Replace both inside plastic cover and outside brass cover.
Handle assembly leaking.	1.) Handle assembly is not tight.	1.) Tighten handle assembly.

## Care of Chrome-Plated Surfaces

The suggested cleaning of chrome-plated surfaces is simply to clean them with mild soap and water, then dry. Commercial cleaning compounds are never recommended.

## Seasonal Use

Valves used in installations subject to shut down because of cold and freezing conditions should be maintained in the following manner. After the main supply has been shut off and the water drained from the system, remove the stop valve cap and stop valve internals to allow the water to drain from the flush valve itself.

\*See previous page for numerical references.



**ZURN INDUSTRIES, INC.** COMMERCIAL BRASS OPERATION, 5900 ELWIN BUCHANAN DRIVE, SANFORD, NC, U.S.A. 27330  
PHONE: 1-800-997-3876 FAX: 919/775-3541 WEBSITE: [www.zurn.com](http://www.zurn.com)

**ZURN INDUSTRIES LIMITED** 3544 NASHUA DRIVE, MISSISSAUGA, ONTARIO L4V 1L2 PHONE: 905/405-8272 FAX: 905/405-1292